Steering wheel control interface installation kit for:

TOYOTA

Model: Avensis (T25) 2003>2009 with original Headunit Fujitsu Ten/Matsushita;

Auris (E15J) 2003>2009 with original Headunit Fujitsu Ten/Matsushita;

Corolla (T27) (E120) 2001>2011 with original Headunit Fujitsu Ten/Matsushita;

Hilux 2004>2012 with original Headunit Fujitsu Ten/Matsushita; Landcruiser 1998> with original Headunit Fujitsu Ten/Matsushita; Prado 2007> with original Headunit Fujitsu Ten/Matsushita;

Prius 2010> with original Headunit Fujitsu Ten/Matsushita;

RAV4 2001>2011 with original Headunit Fujitsu Ten/Matsushita; Rush 2006>2011 with original Headunit Fujitsu Ten/Matsushita;

Yaris (XP9) 2001>2011 with original Headunit Fujitsu Ten/Matsushita;

Kit content: SWC RESISTIVE interface

wiring harness radio adapter

radio adapter

Customer code: CA-R-PI.201



INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.


The manufacturer / dealer is not liable for any kind of incidental or indirect damages.

04/2018 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

All installation work must be performed by a qualified professional installer only.

The manufacturer / dealer is not liable for any kind of incidental or indirect damages.

04/2018 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

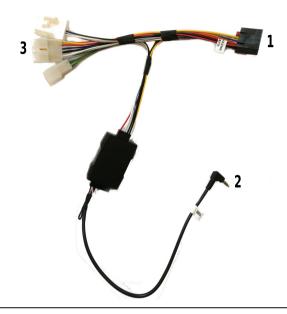

ATTENTION!

In order to prevent ESD damage, the WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

Connect cables to the radio side as follow:

- 1- to ISO CONNECTORS (black and red housings)
- 2- to WIRED REMOTE SOCKET (NOTE: do not connect to microphone socket)

Connect cables to the car side as follow:

3- to CAR CONNECTOR



The steering wheel buttons perform the following functions (if supported by the radio):

- 1- Volume +
- 2- Volume -
- 3- Source
- 4*- Short Press (<0,5 Secs) = Preset up

Long Press (>0,5 Secs) = Seek up (0.5)

5*- Short Press (<0,5 Secs) = Preset down

Long Press (>0,5 Secs) = Seek down (0.5)

- 6- Reject incoming call (if supported by radio and Vehicle)
- 7*- Short Press (<0,5 Secs) = Accept incoming call (if supported by radio and Vehicle)

Long Press (>0,5 Secs) = Voice

*NOTE: depending on the radio model, the activation time of this functions could be longer.

cut along the dotted line - copy for the vehicle owner