


HARD WIRED REMOTE CONTROL INTERFACE  
Adaptateur commande au volant / Stuurafstandsbediening / Lenkradbedienung





**Renault**  
**Megane 2009>**  
**For Fakra and ISO Versions**

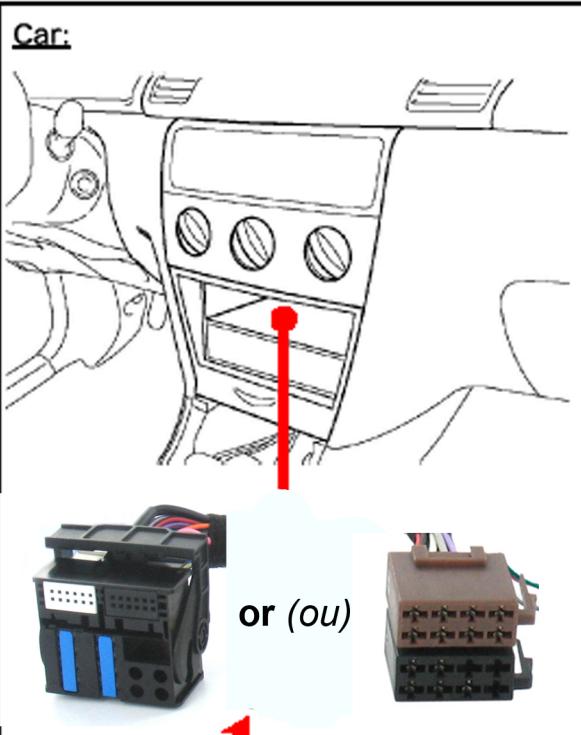


1. Pink Wire (Rose) - Speed Pulse (Impulsion de Vitesse)
2. Green/White Wire (Vert/Blanc) - Park Brake (Frein à main)
3. Purple/White Wire (Violet/Blanc) - Reverse (Marche arrière)

Autoradio:

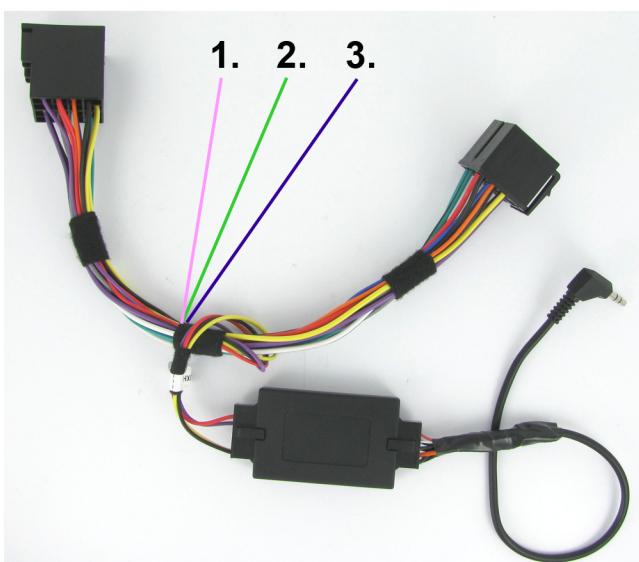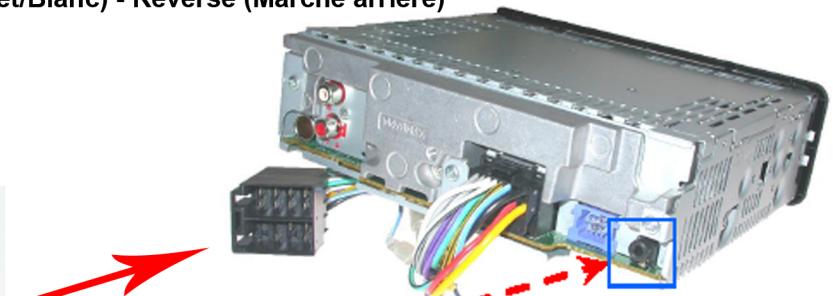

Front view ISO power connector:	
lock	Front view
2	4
4	6
6	8
1	3
3	5
5	7

A1 = Speed Signal - Blue/Black Wire  
 Impulsion de Vitesse - Bleu/Noir  
 A2 = Reverse Gear - Purple Wire  
 Marche arrière - Violet  
 A3 = Not Connected  
 Non relié  
 A4 = +12 Volts - Yellow Wire  
 +12 Volts - Jaune  
 A5 = Antenna Remote  
 Extérieur d'antenne  
 A6 = Illumination - Orange Wire  
 Illumination - Orange  
 A7 = Ignition - Red Wire  
 Ignition - Rouge  
 A8 = Ground - Brown Wire  
 La terre - Brun

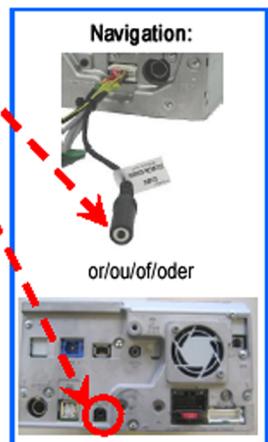

# User Guide

## Setting the Clock (Vehicles with and without Clock setting buttons)

1. To enter clock setting mode, press and hold the 'AUDIO SOURCE' button on the steering wheel until the time displayed on the dash shows '00:00'
2. After one second, the display will return back to normal. This indicates you are now in clock setting mode.
3. Use Vol + and Vol - on the steering wheel to adjust the time.  
Vol + changes hours and Vol - changes minutes.
4. Once the time has been set, if neither button is pushed within five seconds the display will show 00:00 for one second to indicate clock setting mode has been left.

