

# Installation Instructions for CA-HE-BMW.001

## APPLICATIONS

### BMW 3 SERIES 2006-2010

(Not for models with Factory Navigation)

## CA-HE-BMW.001

### KIT FEATURES

- Relocates Heated Seat Switches




### KIT COMPONENTS

- A) Pocket • B) Heated Seat Switch Trim Panel • C) Extension Harness


A



B

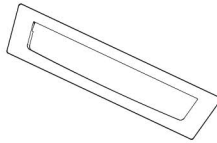

C

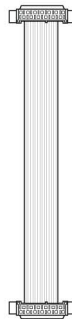

### TOOLS REQUIRED

- Phillips Screwdriver • Panel Removal Tool • Small Flat Blade Screwdriver
- Torx Screwdriver



# TABLE OF CONTENTS

## DASH DISASSEMBLY

- **BMW 3 Series 2006-10** ..... **1-2**

## KIT ASSEMBLY

- **BMW 3 Series 2006-10** ..... **3-4**




**Caution:** Disconnect the negative battery terminal before commencing installation. All accessories, switches and air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

**\*NOTE:** Refer also to the instructions included with the aftermarket radio.

## Dash Disassembly

### BMW 3 SERIES 2006-2010

- 1** Carefully unclip and remove the shifter trim panel. (Fig. A)
- 2** Remove (4) Torx screws securing the pocket or ash tray assembly to the shifter trim panel. (Fig. B)
- 3** Unclip and remove the heated seat switch assembly from the climate control panel.
- 4** Remove (5) Torx screws securing the back cover on the heated seat switch assembly. (Fig. C)

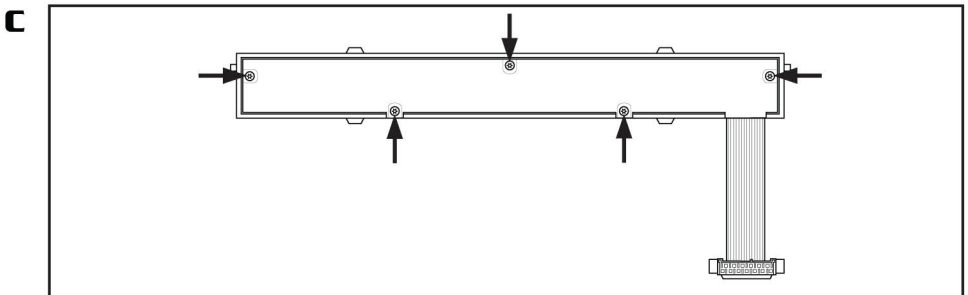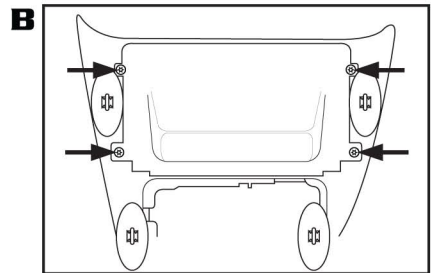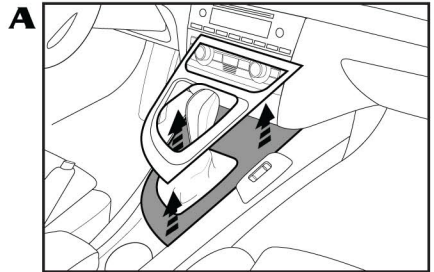


Continue to PG.2.....

## Dash Disassembly

### BMW 3 SERIES 2006-2010

- 5** Remove the circuit board and unplug the factory harness. (Fig. D)

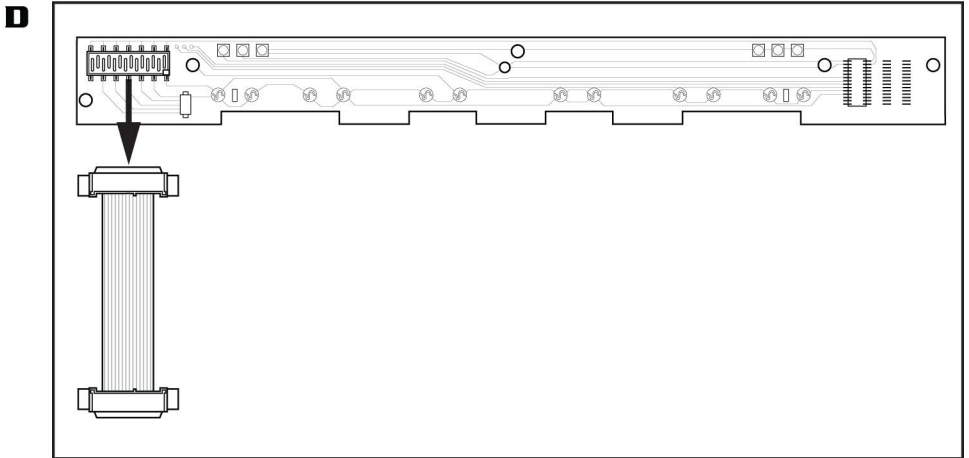


Continue to Kit Assembly.....

## Kit Assembly

### BMW 3 SERIES 2006-2010

- 1 Plug the extension harness onto the circuit board. Then reassemble the heated seat switch assembly. (Fig. A)

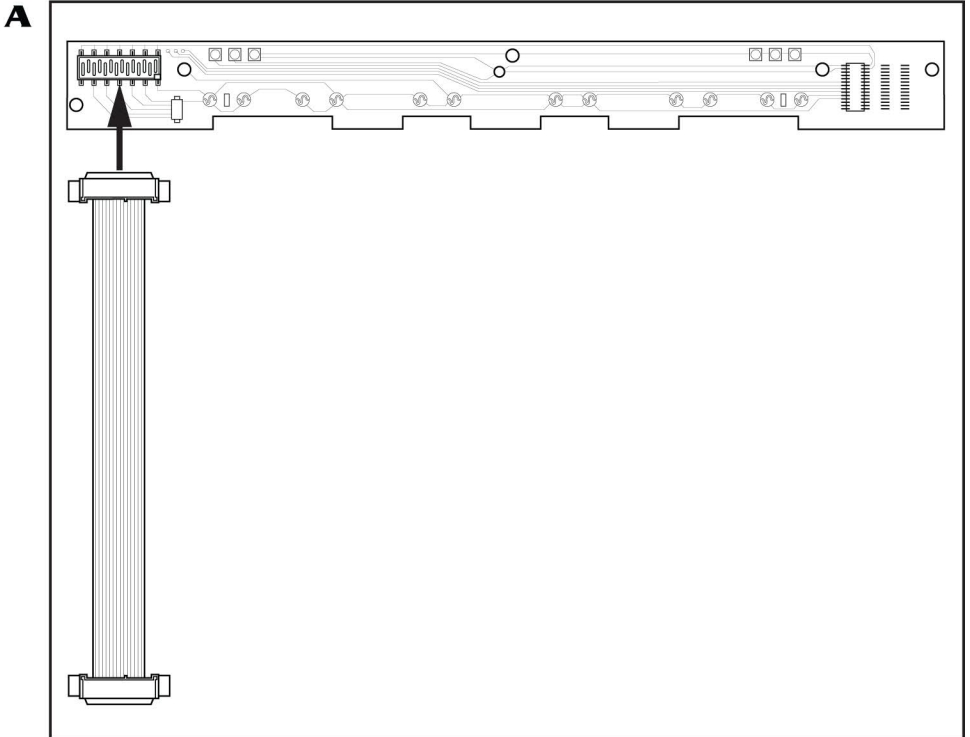

Continue to PG.4.....

## Kit Assembly

### BMW 3 SERIES 2006-2010

- 2** Clip the heated seat switch trim panel into the pocket. (Fig. B)
- 3** Clip the heated seat switch assembly into the pocket/trim panel assembly. (Fig. B)
- 4** Reattach the CA-HE-BMW.001 pocket assembly to the shifter trim panel using the factory hardware
- 5** Route the extension harness through the left side of the dash cavity and plug it into the climate control.

**B**

