

USB replacement PCB installation kit for:

VOLKSWAGEN

Model: T6

Year: 2015>


Kit content: USB replacement PCB

Customer code: CA-IW-VAG.005






1 Remove the plastic panel of the USB interface which is circled in the picture.

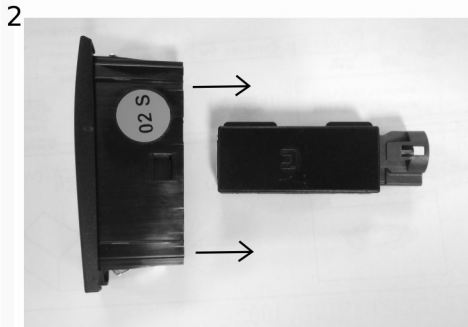


2 Remove the USB interface from the plastic panel.


Pay attention to the plastic side hooks when removing the USB interface.

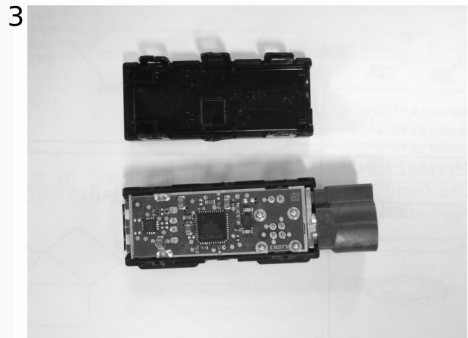

3 Open the plastic cover as shown in the picture and take out the original PCB.

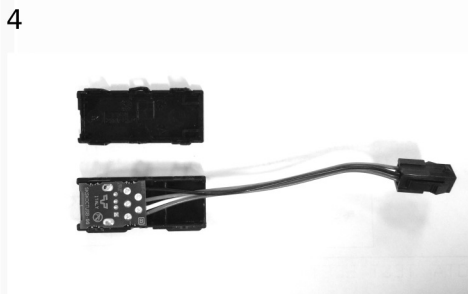

4 Take the new PCB and place into the plastic cover.

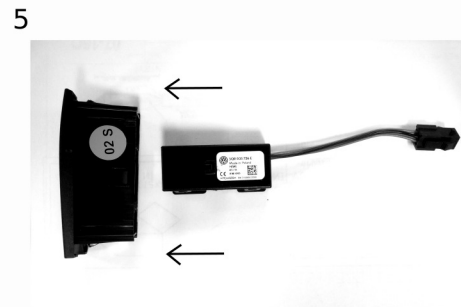

5 Close the plastic cover and place it inside the original plastic panel.



6 Take the supplied harness and plug it to both:
- the connector which is circled in the picture;
- the USB plug on the radio side.

Remount the panel on the dashboard.

ATTENTION! This instructions manual only applies to the USB port shown on the front page.

Other USB ports, such as those shown here below, cannot be replaced by the supplied USB replacement kit.

